
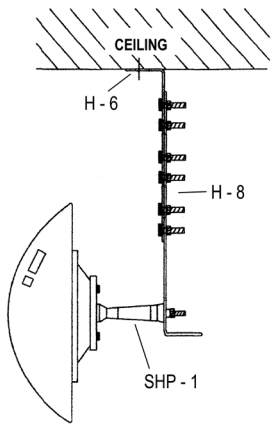


INSTALLATION INSTRUCTIONS

Your Mirror Comes with Kit:



D

CEILING INSTALLATION

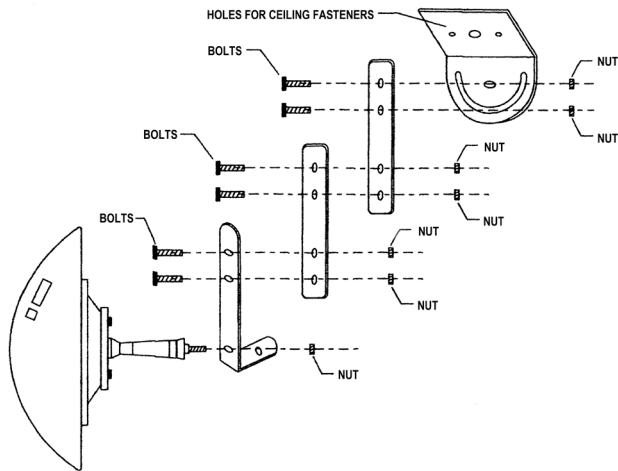

(1) SHP-1

WALL INSTALLATION

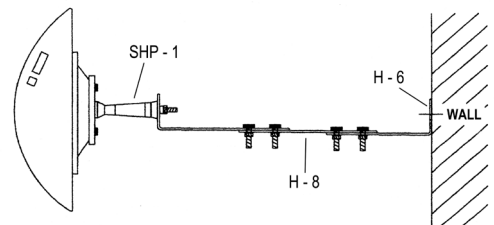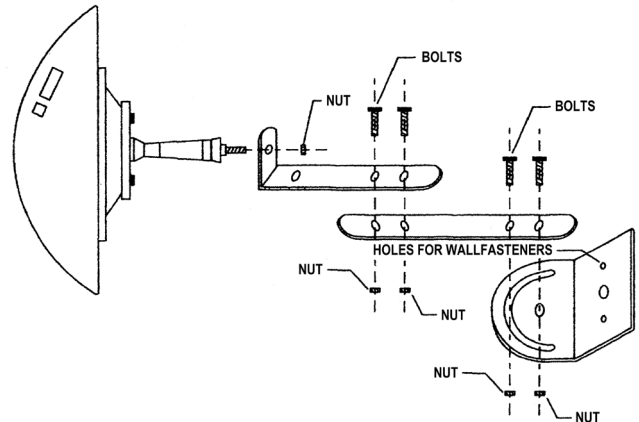

1. Attach base plate of H-6 to wall. (screws and/or anchors for mounting of H-6 not included)
2. Slide ball stud under cover of SHP-1. Screw ball cover into mounting base on back of mirror. Do not over-tighten screws as they will need to be loose to properly adjust mirror when attached to bracket.
3. Attach H-8 to H-6 using (2) bolts, nuts and washers from H-19 bolt package. Do not tighten bolt on smiley portion of plate, adjust H-8 back and forth to achieve desired location and then tighten bolt on smiley of base plate.
4. Unscrew bolt from SHP-1 along with (1) large washer, put threaded end of SHP-1 through hole on H-3 and place washer and bolt onto threaded end of SHP-1. Attach H-3 to end of H-8 using remaining (2) bolts, nuts and washers from H-19.
5. From front adjust mirror accordingly to provide best angle of viewing area, once desired position is achieved, tighten screws in SHP-1 to lock mirror into fixed position.

Additional hardware options are available, please consult with your supplier.

There is no express or implied warranty as to the use of this mirror for any particular purpose